

Assembly Instructions

FIT-000002


Multi-Grip Pull Up Bars 92"

Post in Concrete

Final Assembly



Assembly Steps

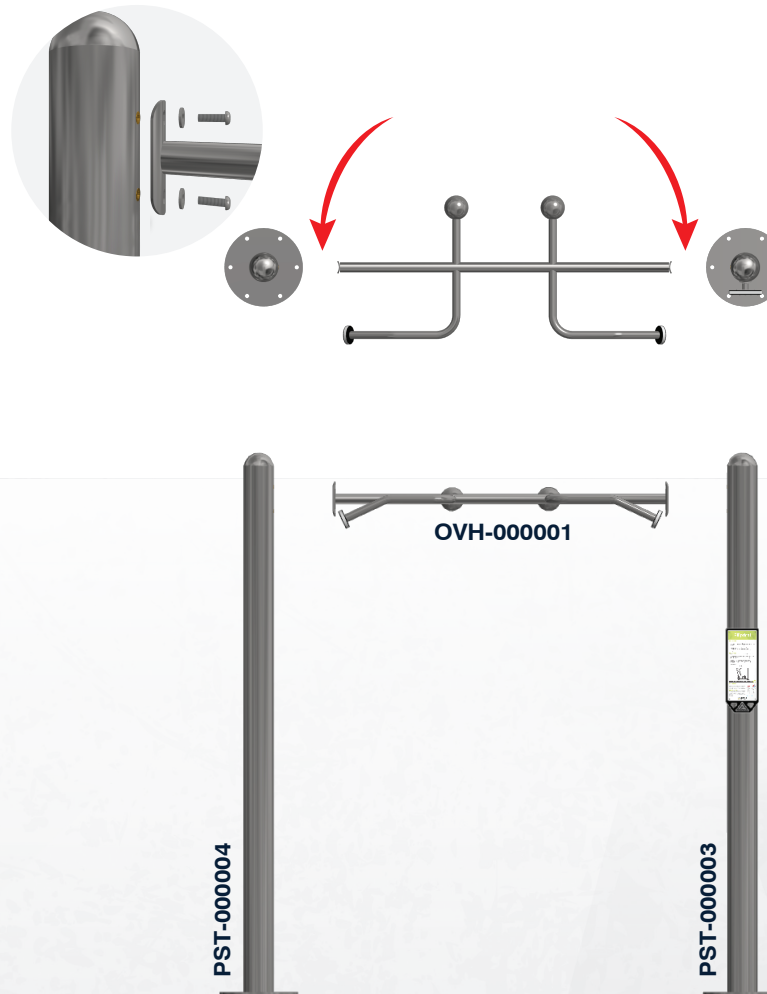

KIT
QTY
x1

TOOLS
HARDWARE KIT



KIT-000057

KIT
QTY
x1

ASSEMBLY
HARDWARE KIT



KIT-000050

KIT
QTY
x2

INSTALL
HARDWARE KIT
Surface Mount 13"



KIT-000054