



Assembly Instructions

FIT-000022

Parallel Bars

Post in Concrete

Final Assembly

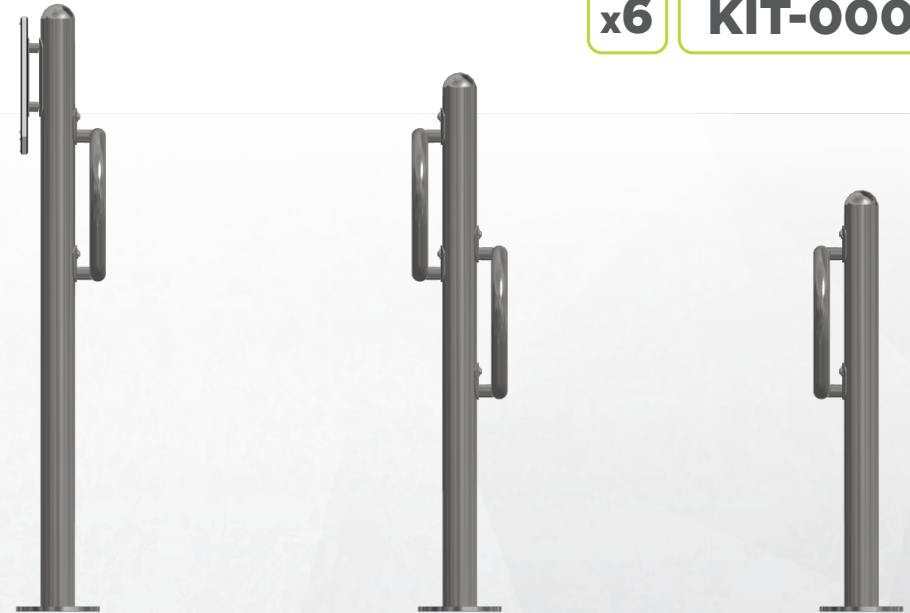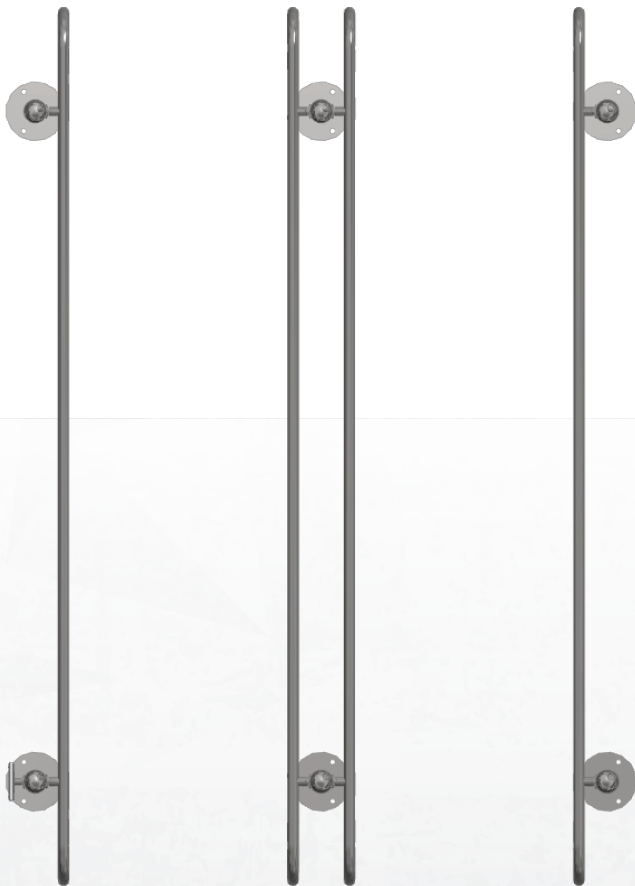

KIT QTY x1	TOOLS HARDWARE KIT  KIT-000057
KIT QTY x4	ASSEMBLY HARDWARE KIT  KIT-000050
KIT QTY x6	INSTALL HARDWARE KIT Post in Concrete 13"  KIT-000054

Assembly Instructions

FIT-000022

Parallel Bars

Post in Concrete

Assembly Steps

